 
 

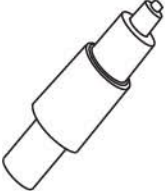


 

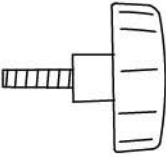




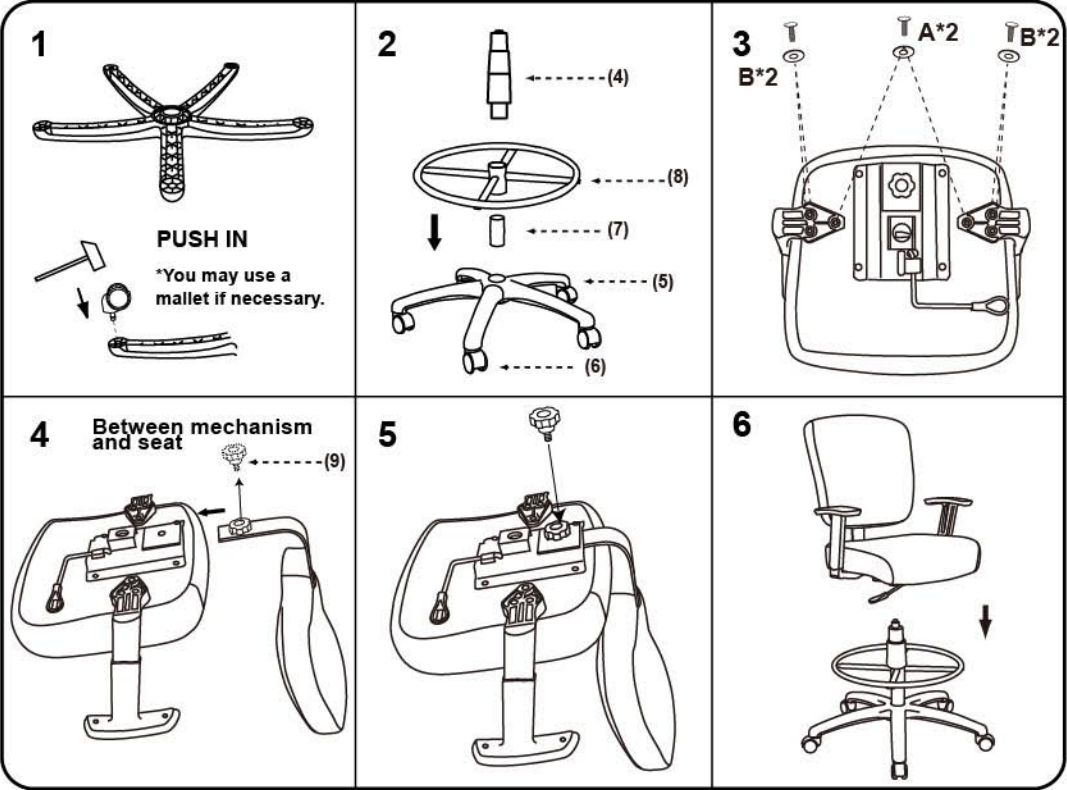


IMPORTANT NOTICE:
HARDWARE PACKAGE IS ATTACHED ON THE
BOTTOM OF SEAT CUSHION.

MODEL: B1681

(1)x1	(2)x1	(3)x1 (L)x1 (R)
		
Back Cushion	Seat Cushion	Left-Arm-L Right-Arm-R
(4)x1	(5)x1	(6)x 5
		
Gas Lift W/ Cover	Base	Caster
(7)x1	(8)x1	(9)x1
		
TU009-EXT	TU009	
<div><div>(A)*2</div><div>M6*25 Arm Screws</div></div> <div><div>(B)*4</div><div>M6*40 Arm Screws</div></div>		



Insert and loosely tighten all screws. When assembly is completed, fully tighten all screws before using.
This chair is only intended for sitting. Any other use will void the warranty.

