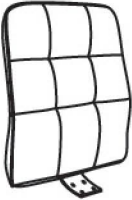

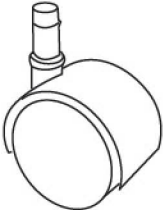
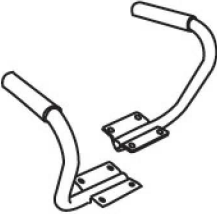
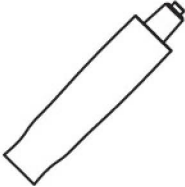

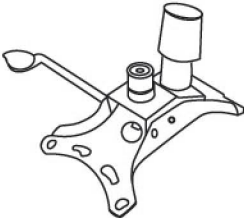



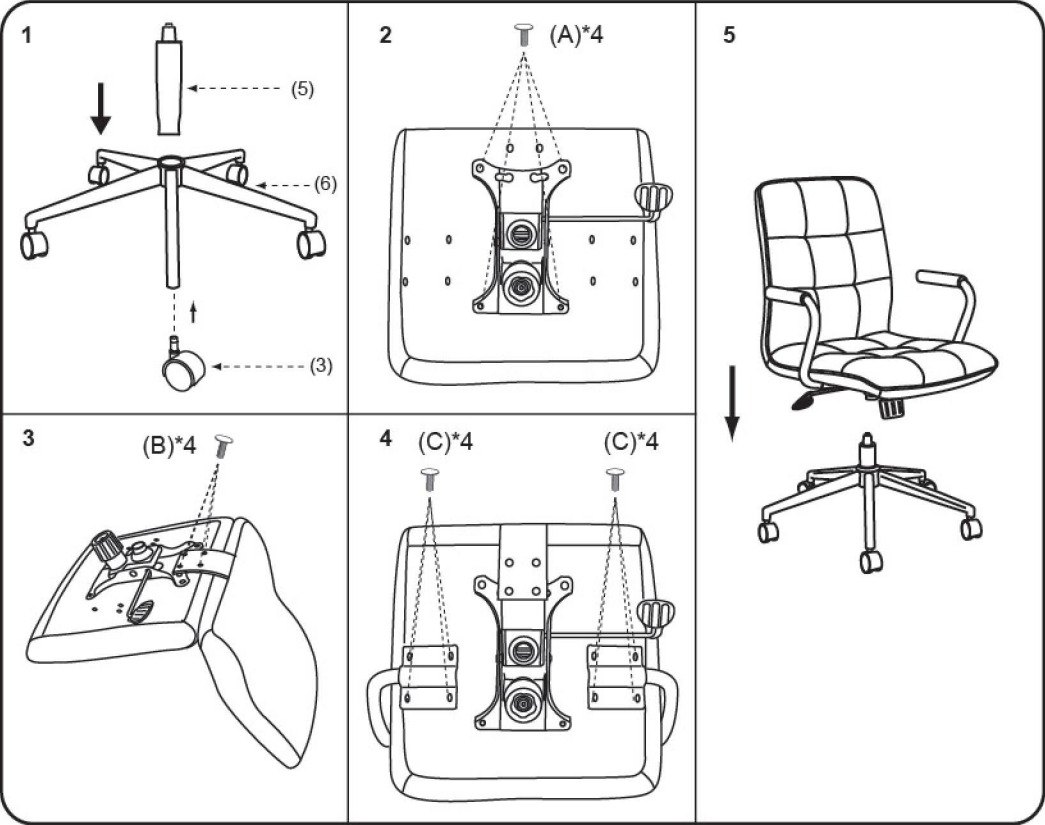


IMPORTANT NOTICE: **HARDWARE PACKAGE IS ATTACHED** **ON THE BOTTOM OF SEAT CUSHION.**

MODEL : B330A B331A

(1)x1	(2)x1	(3)x5
		
BACK	SEAT	CASTERS
(4)x1 (L)x1 (R)	(5)x1	(6)x1
		
LARM LEFT ARM RARM RIGHT ARM	GAS LIFT	BASE
(7)x1		
	<div> <div>(A)x4  M8*22 MECHANISM SCREW</div> <div>(B)x4  M8*30 L-BAR SCREW</div> <div>(C)x8  M6*22 ARM SCREW</div> </div>	
MECHANISM		



B330A



B331A

Insert and loosely tighten all screws. When assembly is completed, fully tighten all screws before using. This chair is only intended for sitting. Any other use will void the warranty.