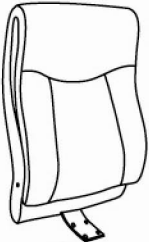

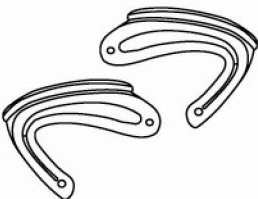
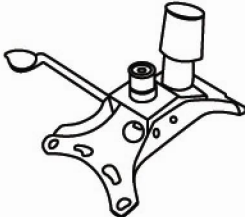


 
 


 
 


 
 



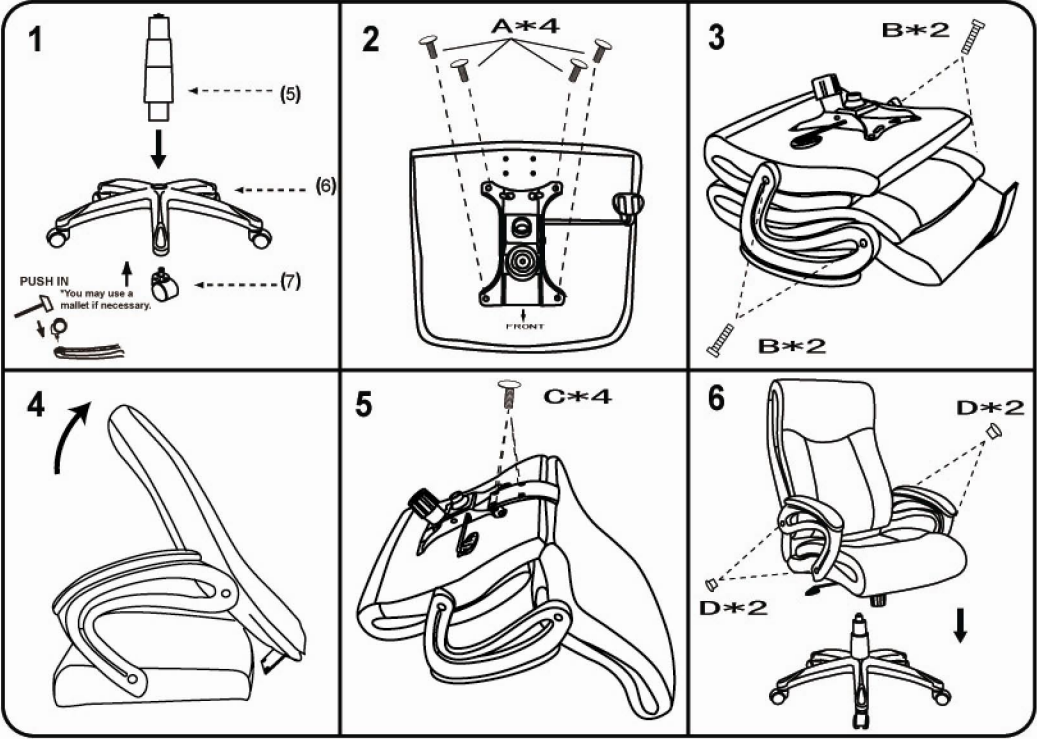


**Please unscrew all hardware from cushion before assembly.**  
**Por favor de destornillar todos los tornillos del cojín antes de assamblar la silla.**

MODEL:B8661

(1)X1	(2)X1	(3)X1 (L)X1 (R)												
 BACK	 SEAT	 LARM LEFT ARM RARM RIGHT ARM												
(4)X1	(5)X1	(6)X1												
 MECHANISM	 GAS LIFT	 BASE												
(7)X5	<table><tr><td>(A)x4</td><td></td><td>M8*22 Mechanism Screw</td></tr><tr><td>(B)x4</td><td></td><td>M8*55 Arm Screw</td></tr><tr><td>(C)x4</td><td></td><td>M8*30 L-Bar Screw</td></tr><tr><td>(D)x4</td><td></td><td>Arm Cap</td></tr></table>		(A)x4		M8*22 Mechanism Screw	(B)x4		M8*55 Arm Screw	(C)x4		M8*30 L-Bar Screw	(D)x4		Arm Cap
(A)x4		M8*22 Mechanism Screw												
(B)x4		M8*55 Arm Screw												
(C)x4		M8*30 L-Bar Screw												
(D)x4		Arm Cap												
 CASTERS														



**Note: Please tighten all arm screws using allen key before step 6**

Insert and loosely tighten all screws. When assembly is completed, fully tighten all screws before using. This chair is only intended for sitting. Any other use will void the warranty.

