 
 



# Assembly Instructions

## MODEL NO.:N158


### BOOKCASE

TUN010CL	TUN011KC	C	TUN026	TUN030AG	TUN020SG
 Cam lock 29Pcs+1Pc(spare)	 Klix Cam 29Pcs+1Pc(spare)	 Cam Cover 29Pcs+1Pc(spare)	 Dowel 14Pcs+1Pc(spare)	 Adjustable Glide 4 Pcs	 Shelf dowel 12Pcs+1Pc(spare)

#### STEP1

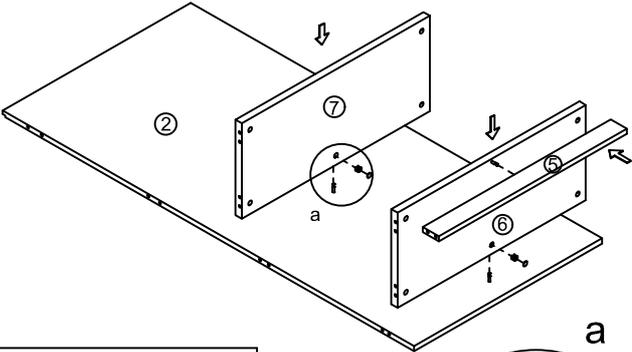

#### STEP2



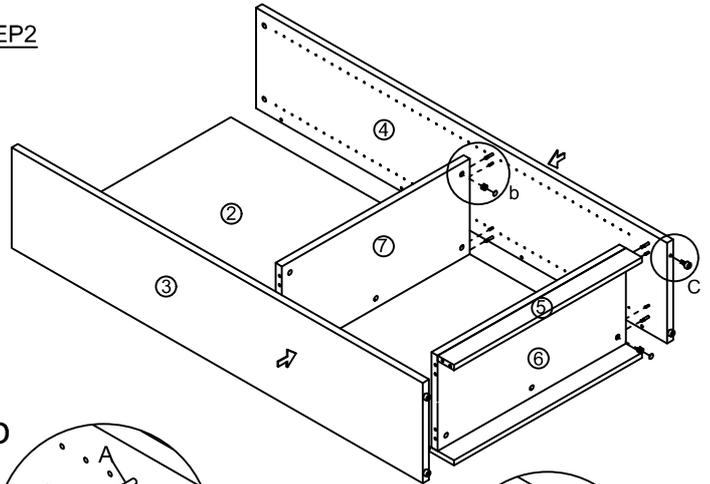


#### IMPORTANT: FUNCTION OF KLIX CAM








1/4 RIGHT  
TURN FOR  
LOCKING

MAKE SURE THE ARROW IS  
POING UPWARDS BEFORE  
INSERTING INTO THE PANELS  
HOLE

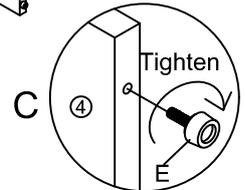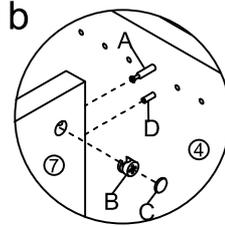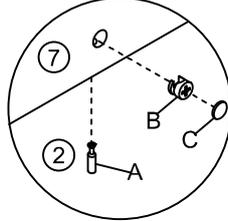

#### STEP3

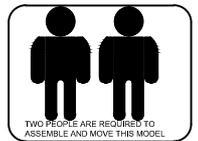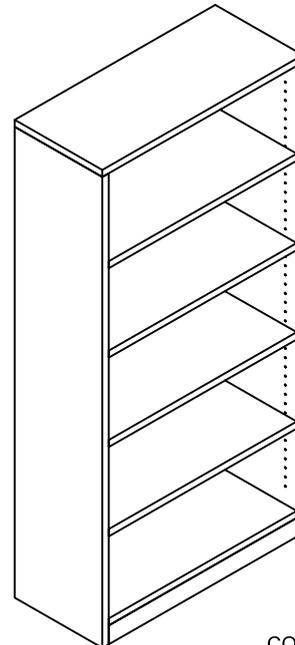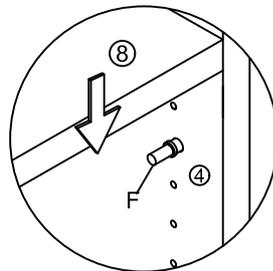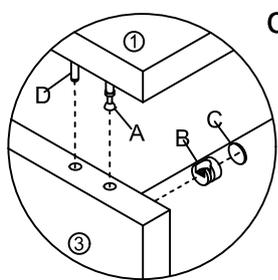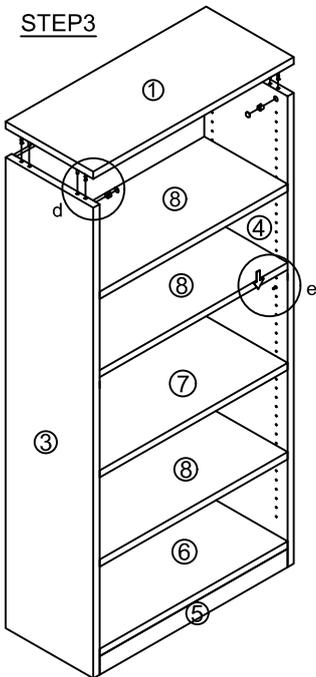

COMPLETED ASSEMBLY

#### IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children
- If the product is not working properly, is missing a part, is damaged, or if you have any questions, please call customer service hotline before returning.
- Customer Service Hotline: 1-800-593-1888 For further assembly instructions, please visit our website at [www.bosshair.com](http://www.bosshair.com)