 




Assembly Instructions
MODEL NO.:N189
 BOW FRONT DESK SHELL

TUN010CL	TUN010KL	C	TUN026	TUN021AG	TUN013LB	TUN018SC	TUN015BG
A 	B 		D 	E 	F 	G 	H 
Cam lock 14Pcs+1Pc(spare)	Klix Cam 14Pcs+1Pc(spare)	Cam Cover 19Pcs+1Pc(spare)	Dowel 9Pcs+1Pc(spare)	Adjustable Glide 4 PCS	6Hole L-Bracket 5Pcs	screw#4*5/8" 30Pcs+1Pc(spare)	80mm Black Grommet 2 PCS

STEP1

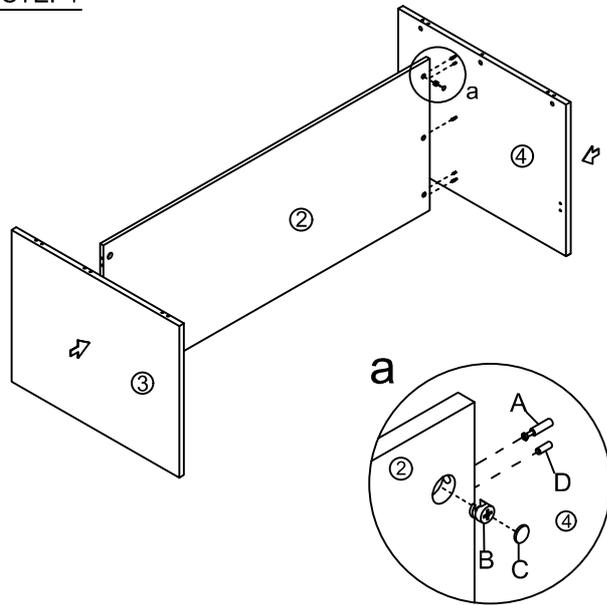

STEP2

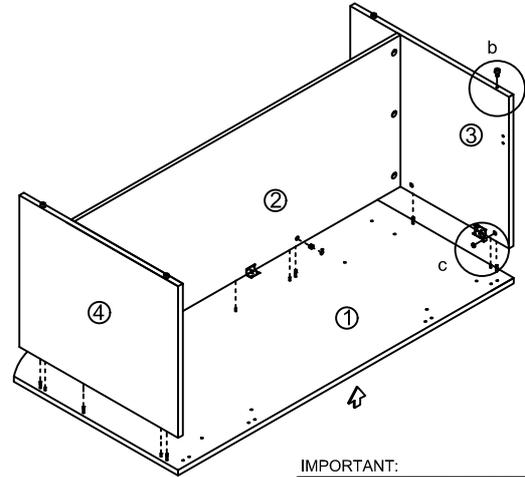






IMPORTANT:
FUNCTION OF KLIX CAM



1/4 RIGHT
 TURN FOR
 LOCKING

MAKE SURE THE ARROW IS
 POINTING UPWARDS BEFORE
 INSERTING INTO THE PANELS
 HOLE

STEP3

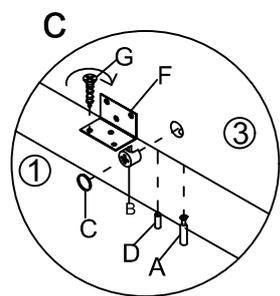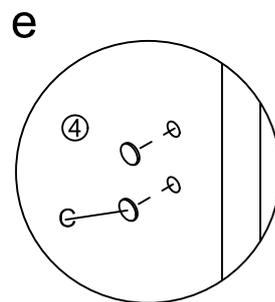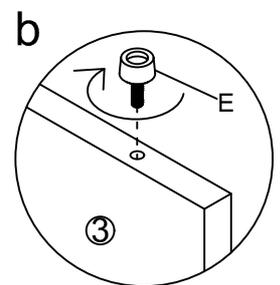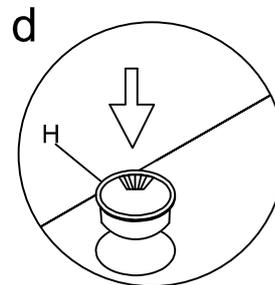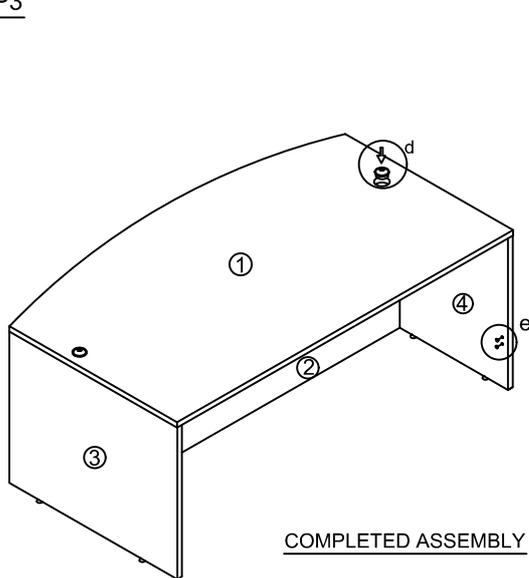

IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children
- If the product is not working properly, is missing a part, is damaged, or if you have any questions, please call customer service hotline before returning.
- Customer Service Hotline: 1-800-593-1888 For further assembly instructions, please visit our website at www.boschair.com