 


BT-134-A

 
PARTS

ASSEMBLY INSTRUCTION


(1)X1

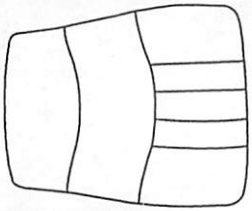

(7)X1



 
(2)X1

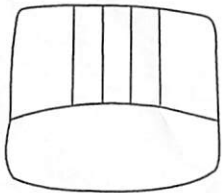

(8)X5



 (3)X1(L)X1(R)

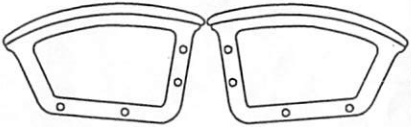

(9)X12



 
(4)X1



(10)X4




(5)X1



(11)X8



 
(6)X1




(12)X1



 
①

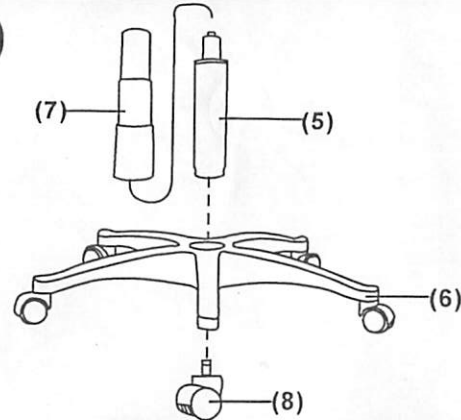


②

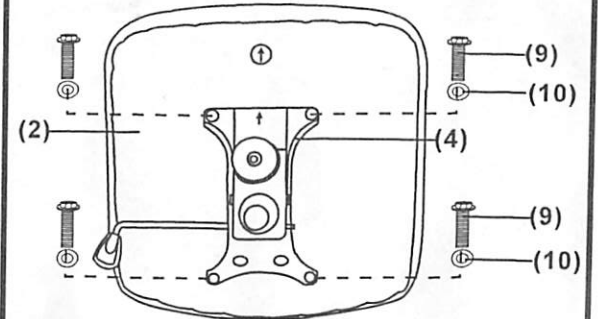 


③

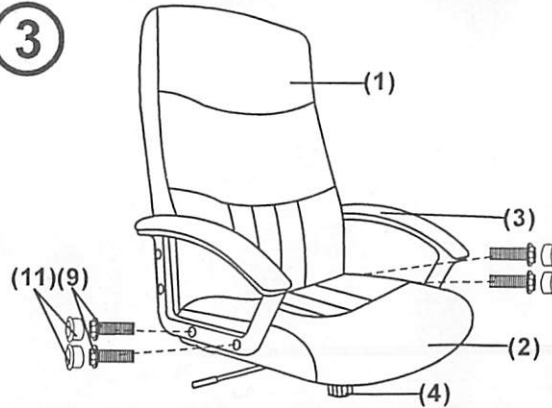 

④

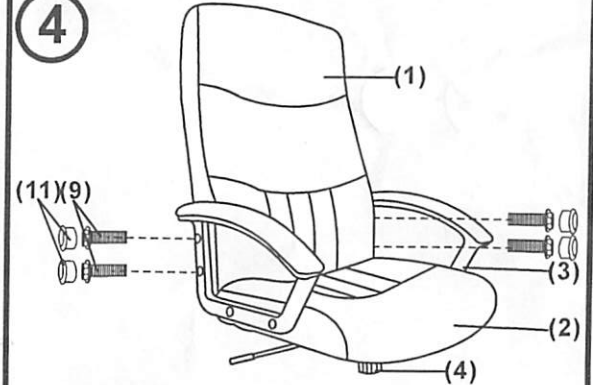 


⑤

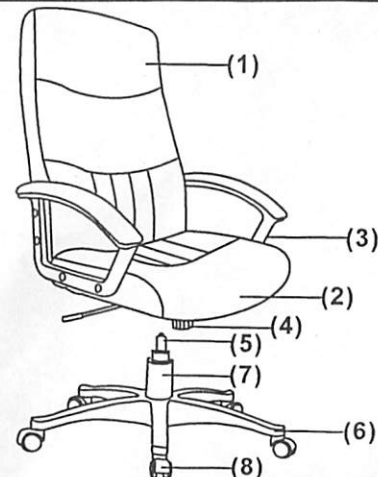 

⑥



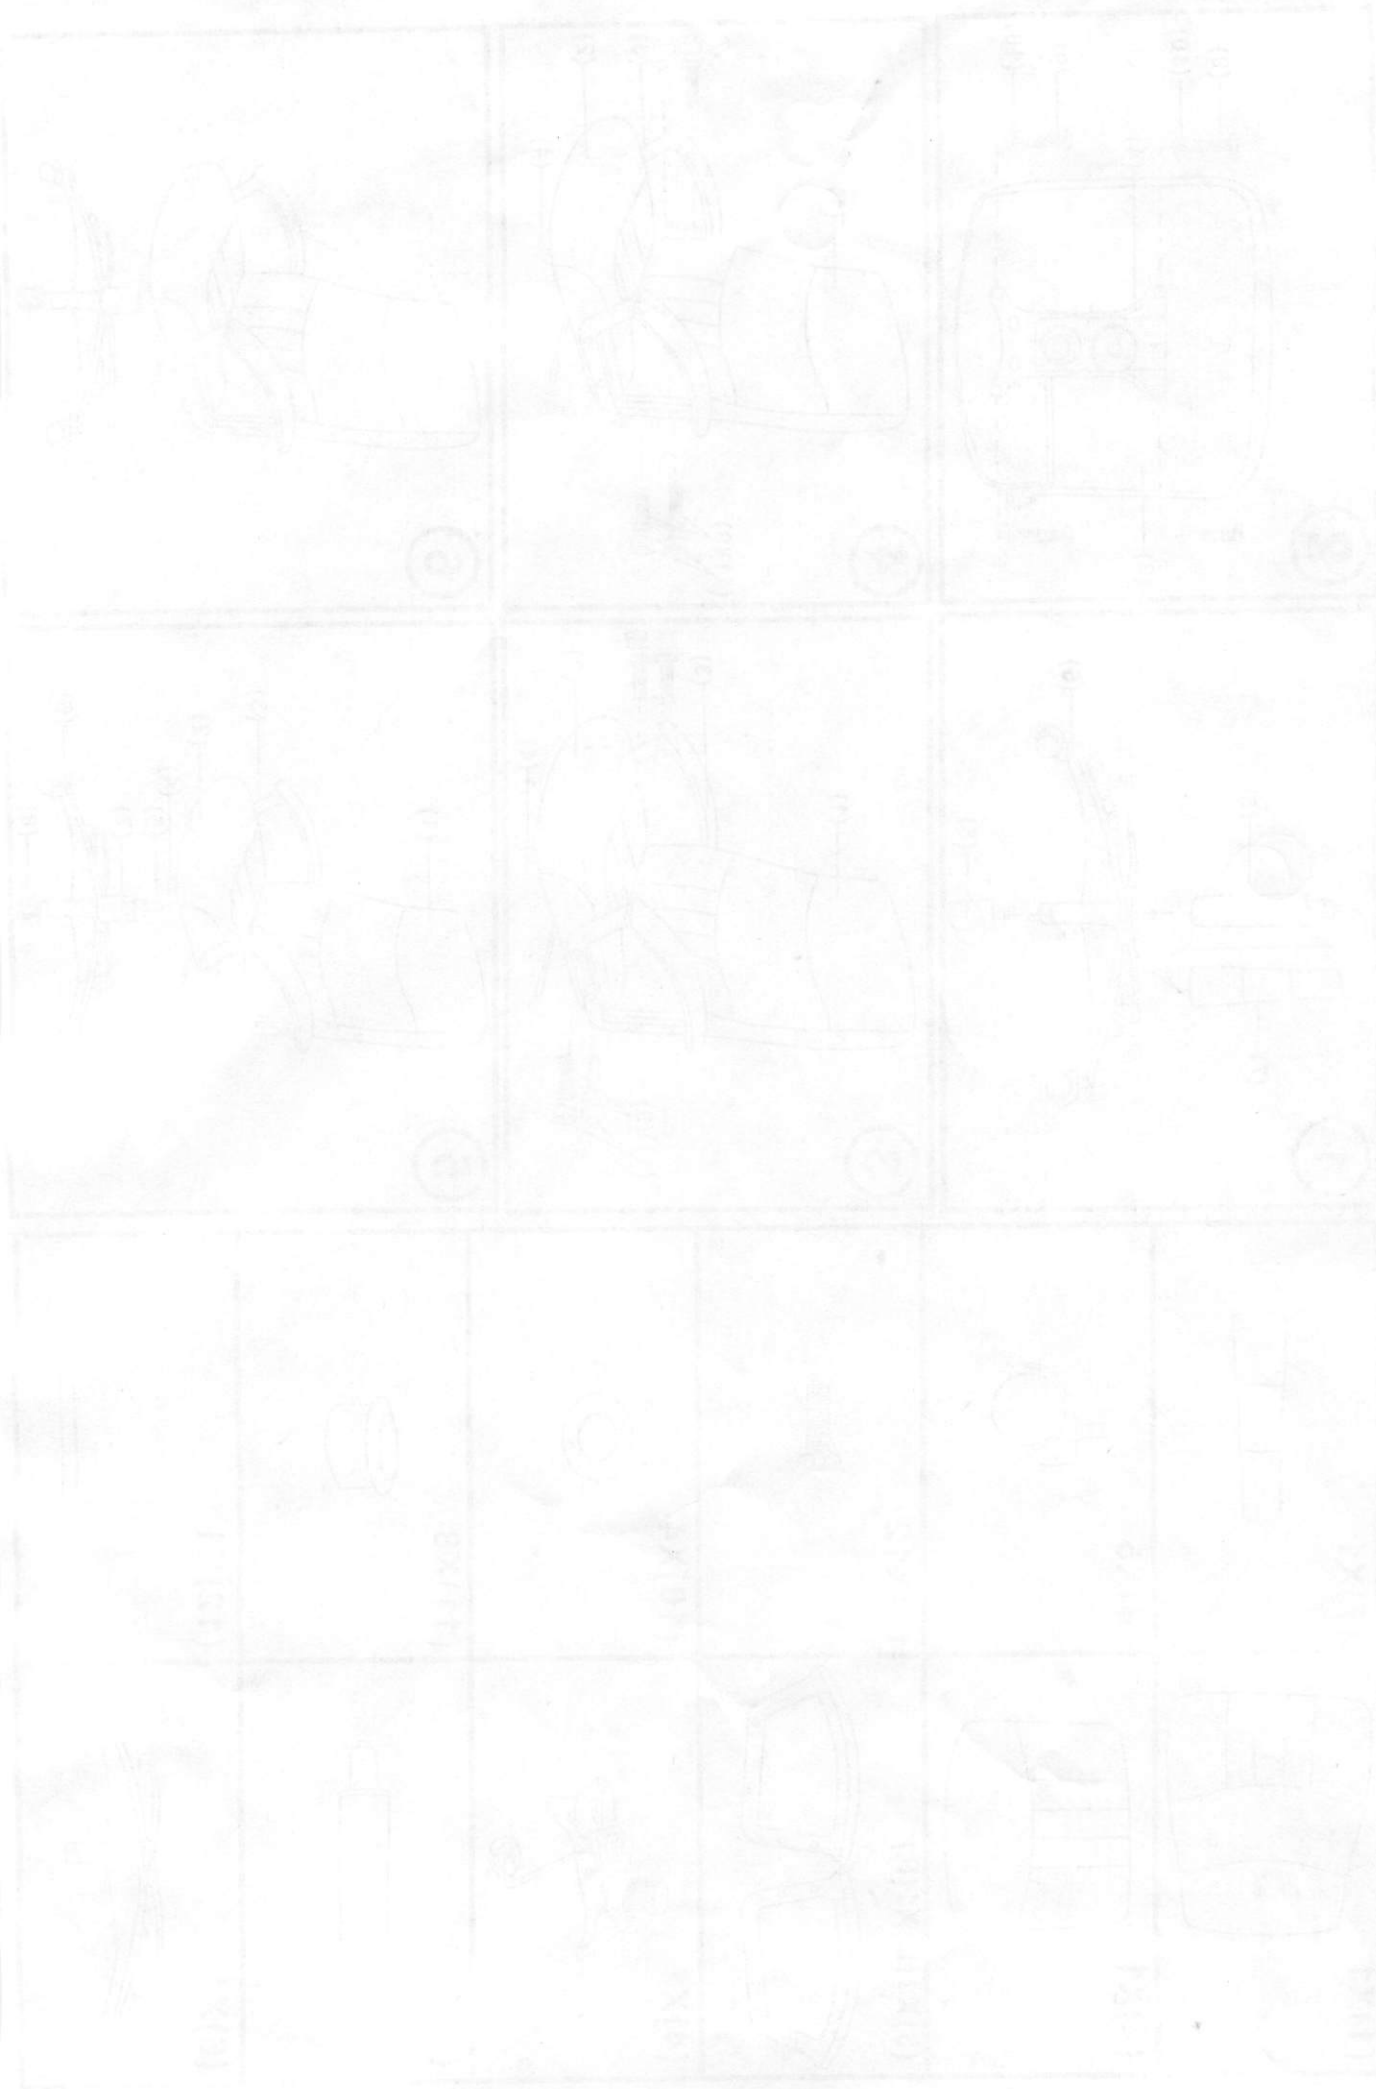 

A-431-134-V

