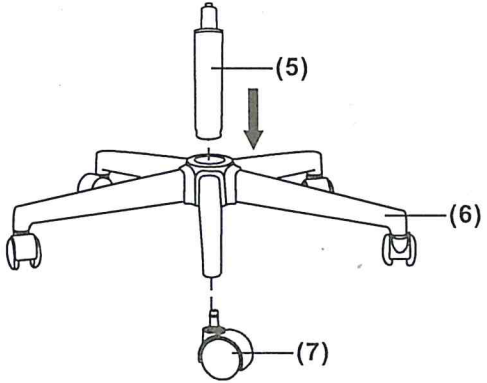
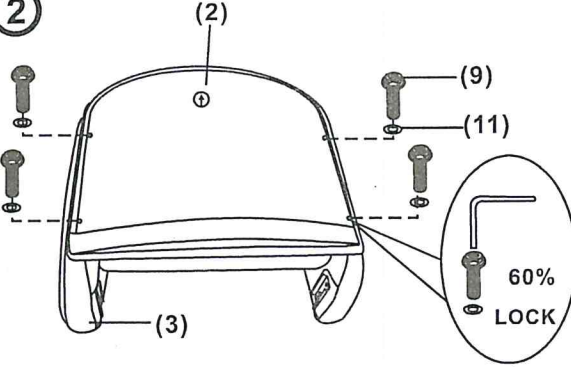
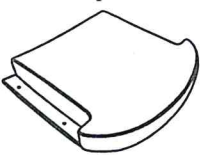
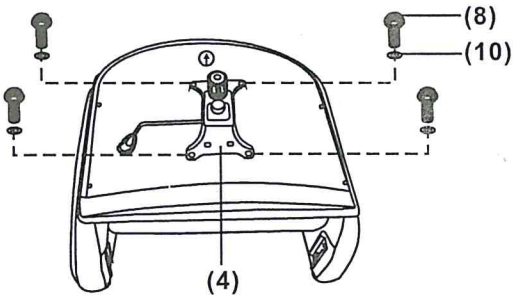
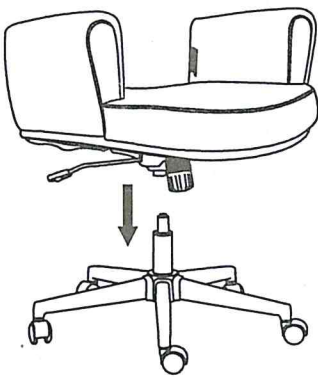
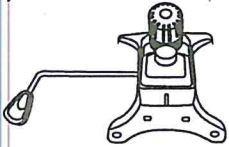
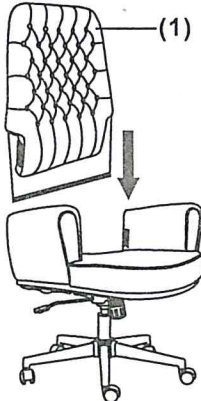
 
 
 
 


BT-444 PARTS

ASSEMBLY INSTRUCTION

(1)X1 	(7)X5 	① 		② 
(2)X1 	(8)X4  M6*22mm			
(3)X1(L)X1(R) 	(9)X4  M8*50mm	③ 		④ 
	(10)X4  6.5*18*1.5mm			
(4)X1 	(11)X4  8.5*22*2mm	⑤ 		⑥ 
(5)X1 	(12)X1  M5			
(6)X1 	(13)X1  M6			
		⑦ 		