

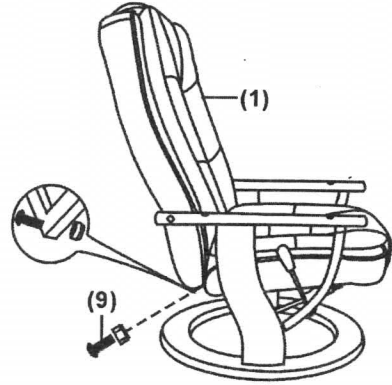
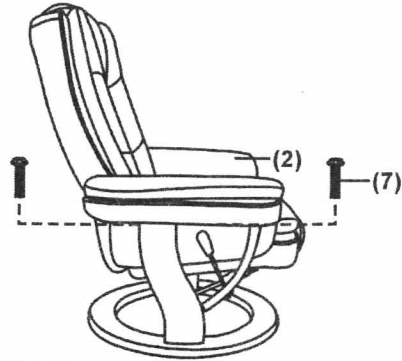


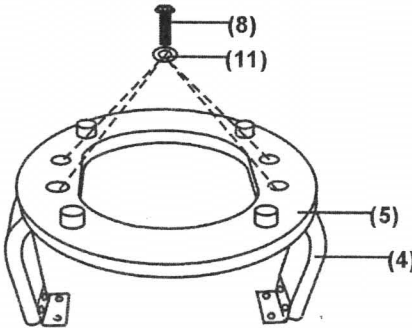
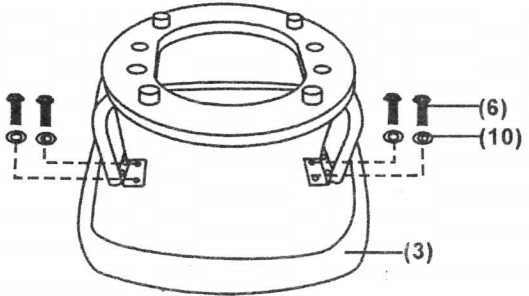


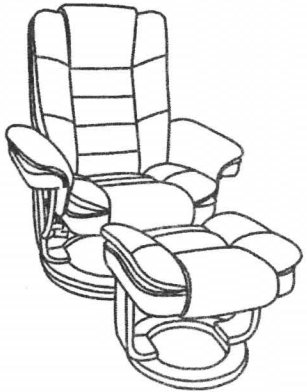


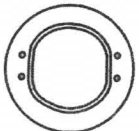






BT-7818 PARTS

ASSEMBLY INSTRUCTION

<p>(1)X1</p> 	<p>(7)X4</p>  <p>M6*35mm</p>	<p>①</p> 	<p>②</p> 
<p>(2)X1(L)X1(R)</p> 	<p>(8)X4</p>  <p>M8*35mm</p>	<p>③</p> 	<p>④</p> 
<p>(3)X1</p> 	<p>(9)X2</p>  <p>M8*25mm</p>	<p>⑤</p> 	
<p>(4)X1</p> 	<p>(10)X4</p>  <p>6.5*18*1.5mm</p>		
<p>(5)X1</p> 	<p>(11)X4</p>  <p>8.5*22*2mm</p>		
<p>(6)X4</p>  <p>M6*20mm</p>	<p>(12)X1</p>  <p>M5</p>		
	<p>(13)X1</p>  <p>M6</p>		
	<p>(14)X1</p> 