

BT-7862
PARTS

ASSEMBLY INSTRUCTION

(1)X1	(8)X1
(2)X1	(9)X1
(3)X1(L)X1(R)	(10)X4
(4)X1	(11)X4
(5)X1	(12)X2
(6)X1	(13)X2
(7)X1	(14)X4
	(15)X1
	(16)X1
	(17)X1

①

②

③

④

⑤

⑥

⑦