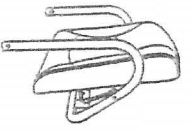

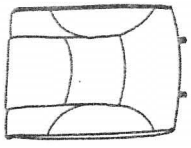
 




 
 

 


 
 


BT-7862  
PARTS

ASSEMBLY INSTRUCTION

(1)X1 	(8)X1 
(2)X1 	(9)X1 
(3)X1(L)X1(R) 	(10)X4  M6*20mm
(4)X1 	(11)X4  M6*40mm
(5)X1 	(12)X2  M8*50mm
(6)X1 	(13)X2  M8*25mm
(7)X1 	(14)X4  6.5*18*1.5mm
	(15)X1  M5
	(16)X1  M6
	(17)X1 