BT-7985 PARTS ASSEMBLY INSTRUCTION (1)X1 2 -(1) (2)X1 -(2) (3) (4) (3)X4 3 (4)X4 (5)X1