 


BT-827-1
PARTS

ASSEMBLY INSTRUCTION

(1)X1

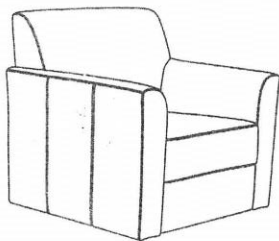

 
(2)X4




(3)X4




(4)X1

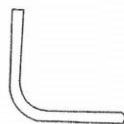

①

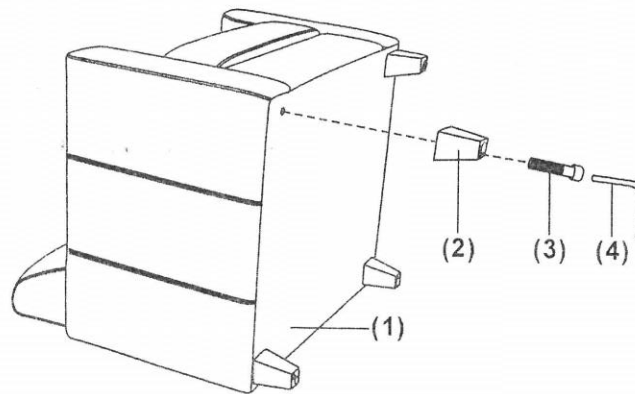 


②

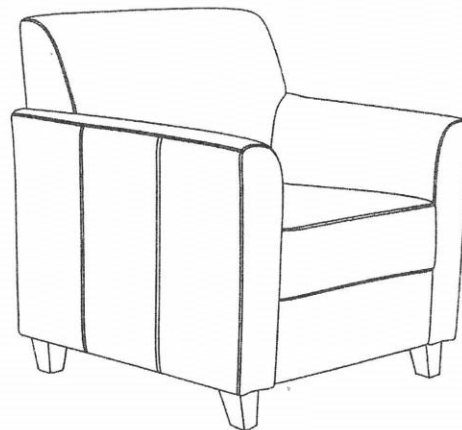 


BT-827-2
PARTS

ASSEMBLY INSTRUCTION

 (1)X1

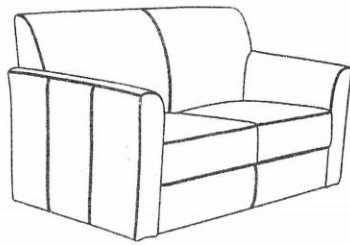

 
(2)X4




(3)X4



 
(4)X1

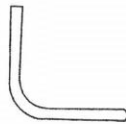

①

   
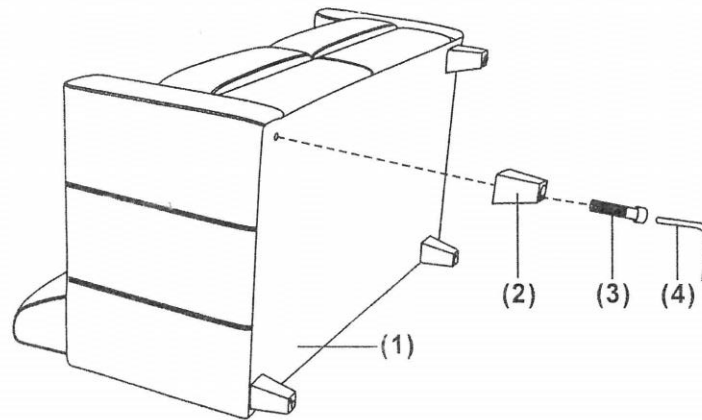 

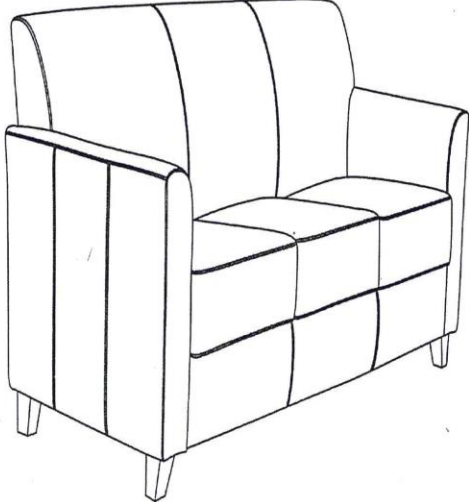 
 


②

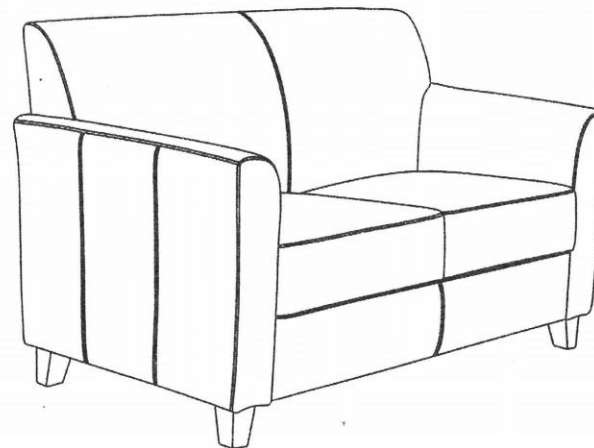

827-3
PARTS

ASSEMBLY INSTRUCTION
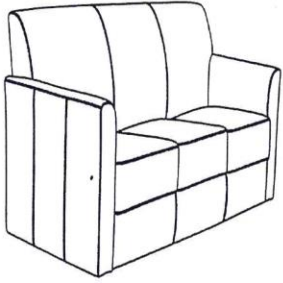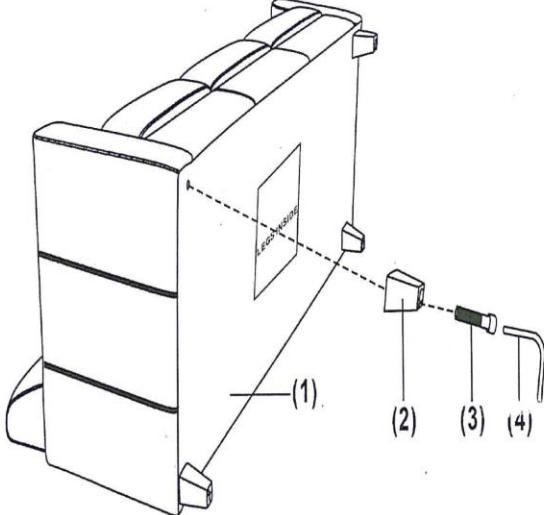
<p>(1)X1</p> 	<p>①</p> 
<p>(2)X4</p> 	<p>②</p> 
<p>(3)X4</p> 	
<p>(4)X1</p> 