


BT-827-1
PARTS

ASSEMBLY INSTRUCTION

(1)X1

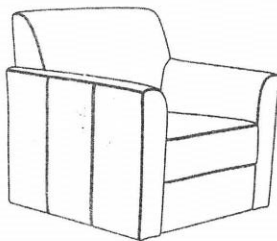


(2)X4




(3)X4




(4)X1

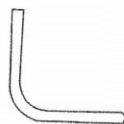

①

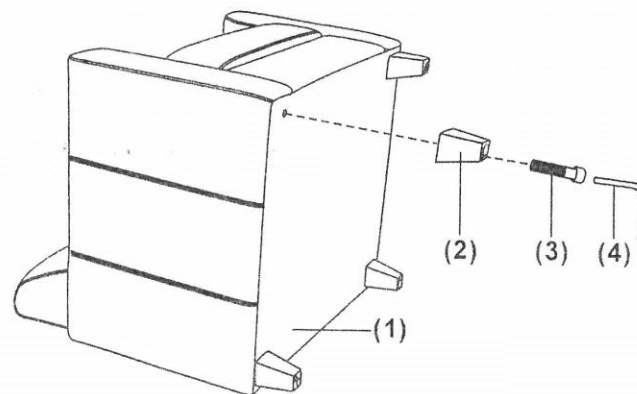


②

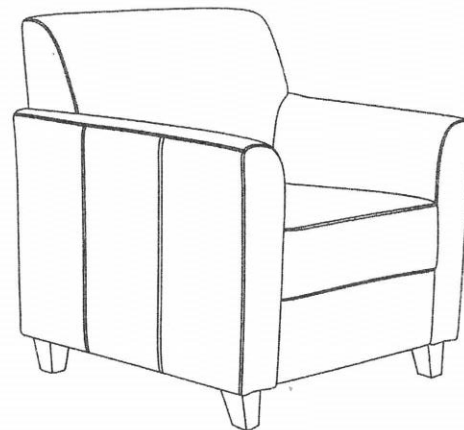

BT-827-2
PARTS

ASSEMBLY INSTRUCTION

(1)X1

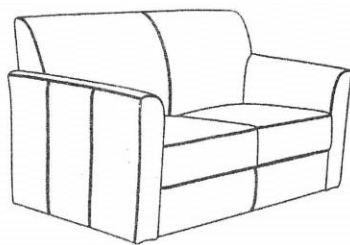


(2)X4




(3)X4




(4)X1

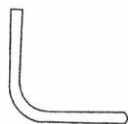

①

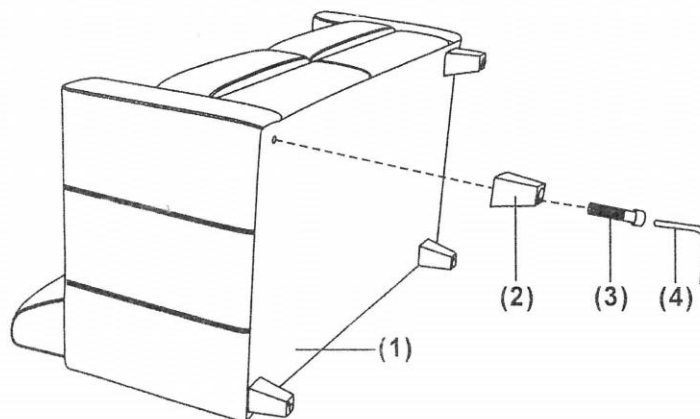


②

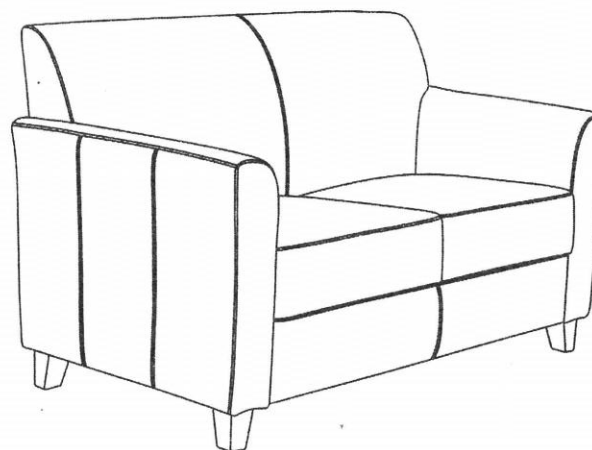

827-3
PARTS

ASSEMBLY INSTRUCTION

(1)X1

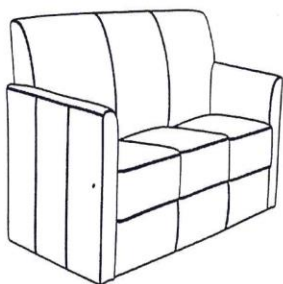


(2)X4




(3)X4



 (4)X1



①

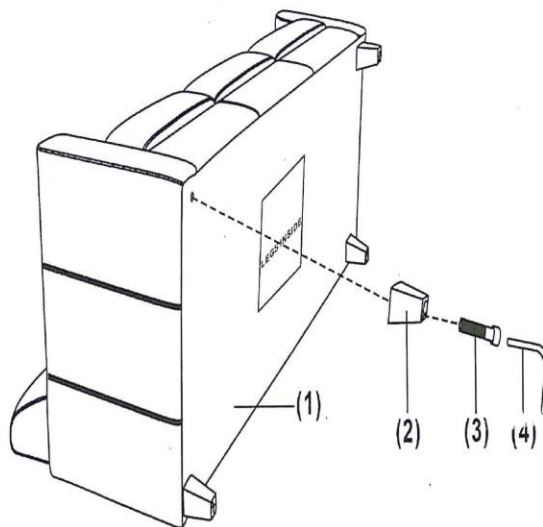

②

