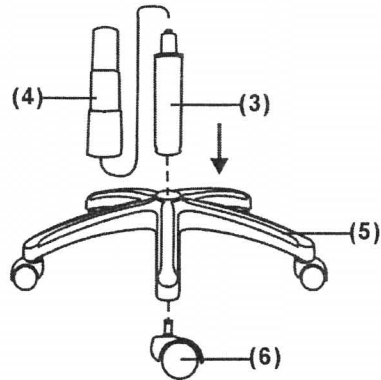
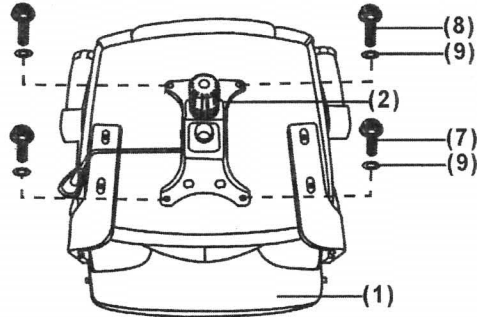
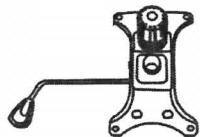
 
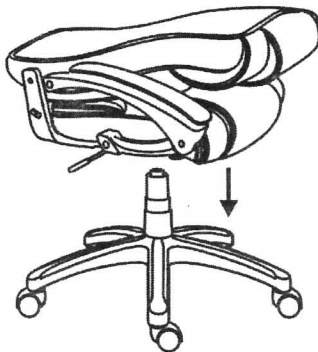
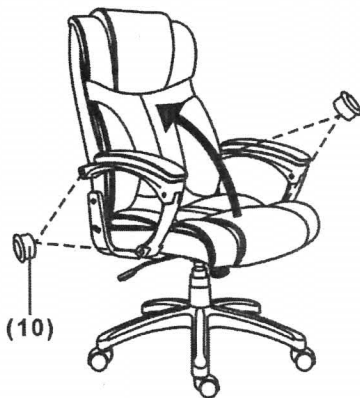
 
 


BT-9875H

BT-9875H PARTS

ASSEMBLY INSTRUCTION

(1)X1 	(6)X5 	① 	② 
(2)X1 	(7)X2 		
(3)X1 	(8)X2 	③  ④  ⑤ 	
(4)X1 	(9)X4 		
(5)X1 	(10)X4  (11)X1 