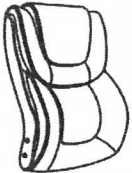 
 
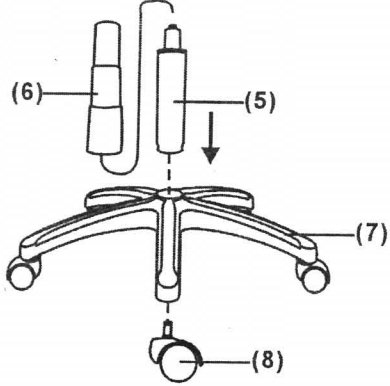 
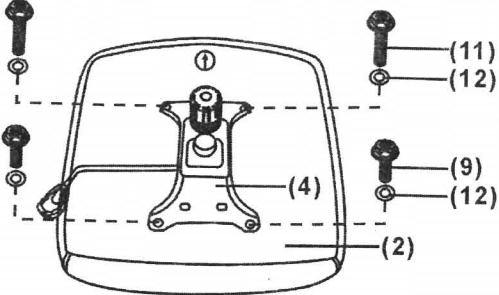 


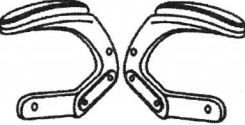 
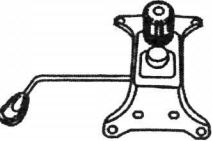 

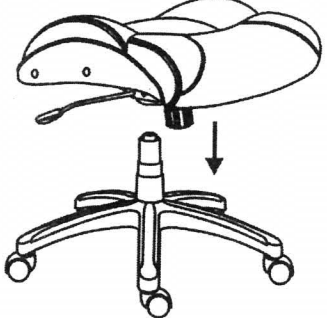 

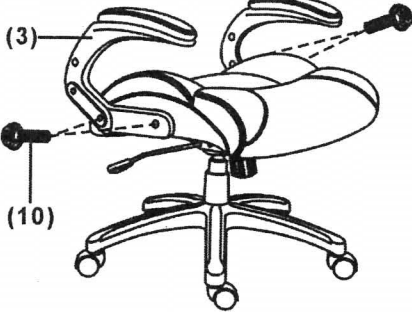 
 

 


 
 


BT-9896H PARTS

ASSEMBLY INSTRUCTION

<p>(1)X1</p> 	<p>(7)X1</p> 	<p>①</p> 	<p>②</p> 	
<p>(2)X1</p> 	<p>(8)X5</p> 			<p>(3)X1(L)X1(R)</p> 
<p>(4)X1</p> 	<p>(10)X8</p> 	<p>③</p> 	<p>(11)X2</p> 	<p>④</p> 
<p>(5)X1</p> 	<p>(12)X4</p> 		<p>(6)X1</p> 	
<p>(14)X2</p> 	<p>(14)X2</p> 	<p>(15)X1</p> 	<p>(15)X1</p> 	<p>⑥</p> 