


 
 













WA-3074 PARTS

ASSEMBLY INSTRUCTION

(1)X1 	(10)X5 
(2)X1 	(11)X1 
(3)X1 	(12)X4 
(4)X1(L)X1(R) 	(13)X2 
(5)X1 	(14)X6 
(6)X1 	(15)X4 
(7)X1 	(16)X2 
(8)X1 	(17)X1 
(9)X1 