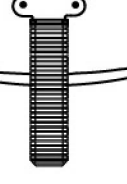
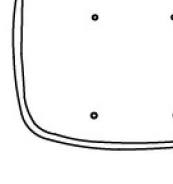
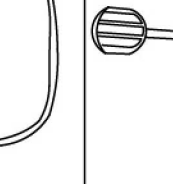

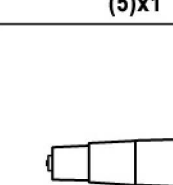
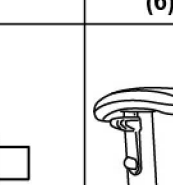
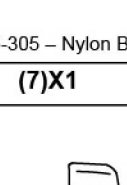
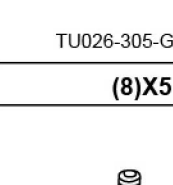




MODEL: B315 B316 B317 B307 B305 B306 B325

<p align="center">(1)x1</p>  <p align="center">Back Cushion Back Support W/ Bellow</p>	<p align="center">(2)x1</p>  <p align="center">Seat Cushion</p>	<p align="center">(3)x1</p>  <p align="center">TU001-305 / mechanism</p>
<p align="center">(4)x 1</p>  <p align="center">TU005-305 – Nylon Base</p>	<p align="center">(5)x1</p>  <p align="center">TU026-305-Gas Lift</p>	<p align="center">(6)X1(L) X1(R)</p>  <p align="center">B316 / B317 Arms</p>
<p align="center">(7)X1</p>  <p align="center">TU305-Knob/Knob</p>	<p align="center">(8)X5</p>  <p align="center">TU015-Casters</p>	
<p>(A)*4  M8*22 Mechanism Screws</p> <p>(B)*6  M6*28 Arm Screws</p>		



A simple line drawing of an office chair. It has a high backrest, armrests, a swivel base, and five casters. The chair is shown from a three-quarter perspective.

B317/307