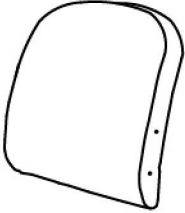

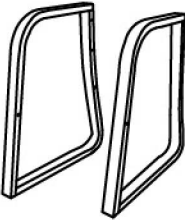







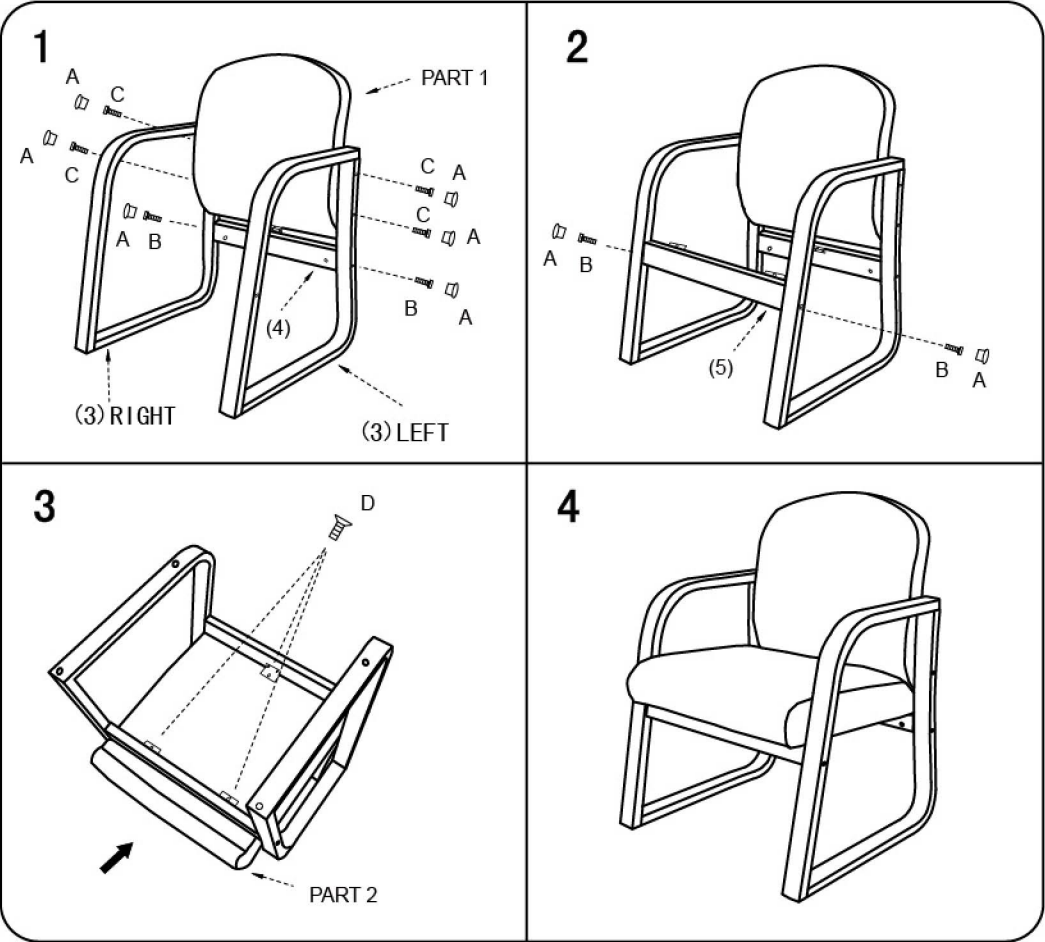


**IMPORTANT NOTICE:  
HARDWARE PACKAGE IS ATTACHED  
ON THE BOTTOM OF SEAT CUSHION.**

MODEL:9560 9570

(1)x1	(2)x1	(3)x1 (L)x1 (R)
		
Back	Seat	Right & Left Frame
(4)x1	(5)x1	
		
Back Bar	Front Bar	
<div> <div>(A)x8</div> <div>WOOD CAP</div> </div> <div> <div>(B)x4</div> <div>M6*80 SCREW FOR FRAME</div> </div> <div> <div>(C)x4</div> <div>M6*60 SCREW FOR BACK CUSHION</div> </div> <div> <div>(D)x3</div> <div>M6*22 SCREW FOR SEAT CUSHION</div> </div> <div> <div>(E)x1</div> <div>ALLEN KEY</div> </div>		



**Insert and loosely tighten all screws. When assembly is completed, fully tighten all screws before using. This chair is only intended for sitting. Any other use will void the warranty.**