
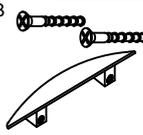



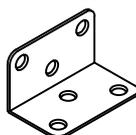
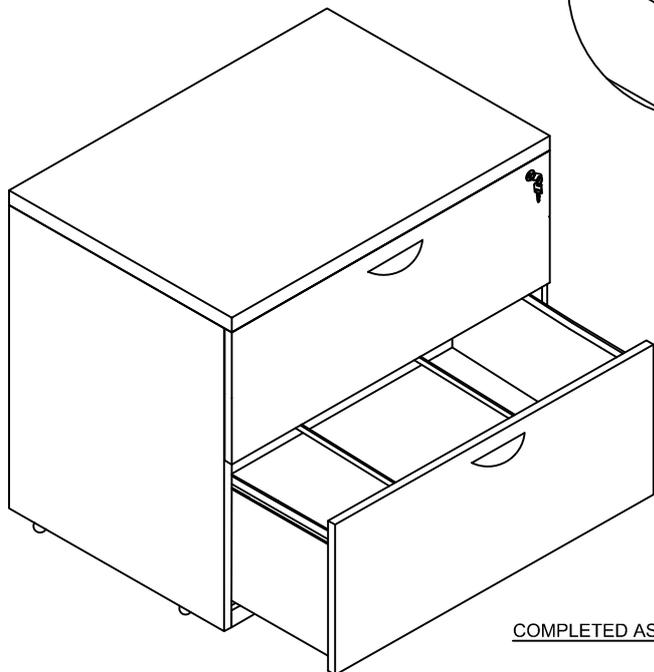
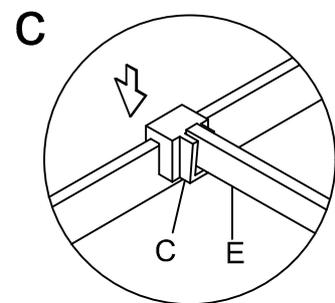
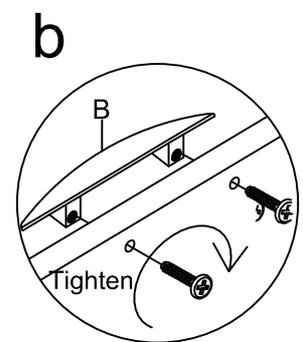
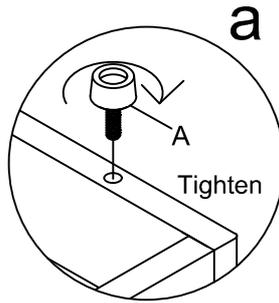
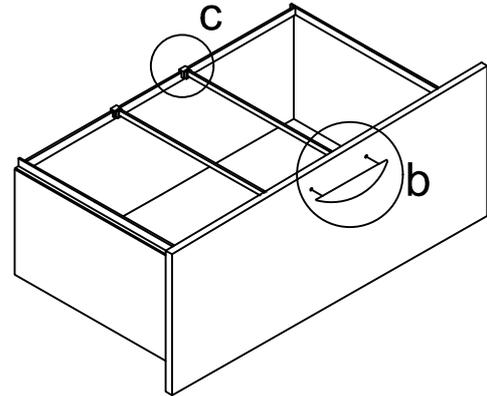


ASSEMBLY INSTRUCTIONS
MODEL NO.: N112
 2 DRAWER LATERAL FILE

TUN021AG	TUN006MH	TUN001FC	TUN003AB	TUN004AB	TUN013LB6	TUN014SC	
 Adjustable Glide 4 PCS	 96mm Metal Scallop shape Handle 2 Sets	 File clip 8+1Pcs	 675*16*3mm Aluminium Bar 2Pcs	 377*16*3mm Aluminium Bar 4Pcs	 6 Hole L-Bracket 4+1 PCS	 Screw #4**5/8" 30 PCS+1Pc(spare)	 Keys 1set

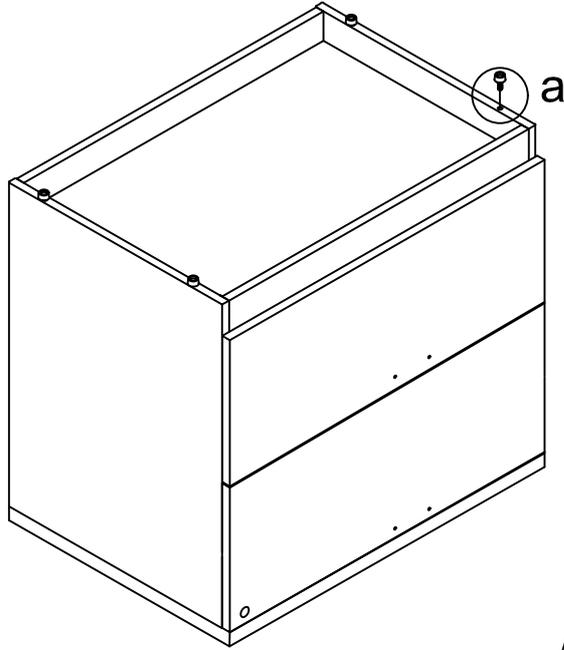

COMPLETED ASSEMBLY

IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children
- If the product is not working properly, is missing a part, is damaged, or if you have any questions, please call customer service hotline before returning.
- Customer Service Hotline: 1-800-593-1888 For further assembly instructions, please visit our website at www.bossschair.com