



Assembly Instructions



MODEL NO.:N143

CREDENZA SHELL


TUN010CL	TUN010KL	C	TUN026	TUN021AG	TUN013LB	TUN018SC	TUN015BG
 Cam lock 12Pcs+1Pcs(spare)	 Klix Cam 12Pcs+1Pcs(spare)	 Cam Cover 17Pcs+1Pcs(spare)	 Dowel 10Pcs+1Pcs(spare)	 Adjustable Glider PCS	 6Hole L-Bracket 5Pcs	 screw#4*5/8" 30Pcs+1Pcs(spare)	 80mm Black Grommet 2 PCS

STEP1

STEP2

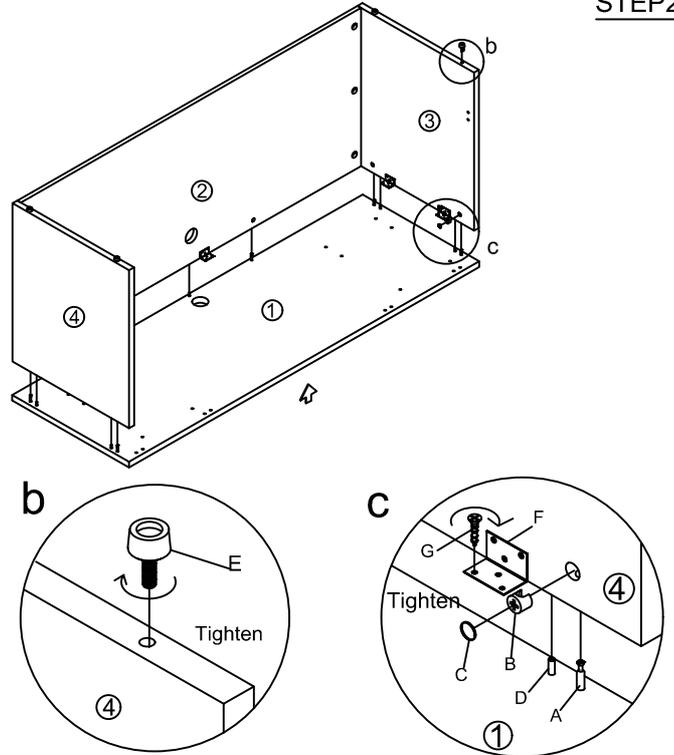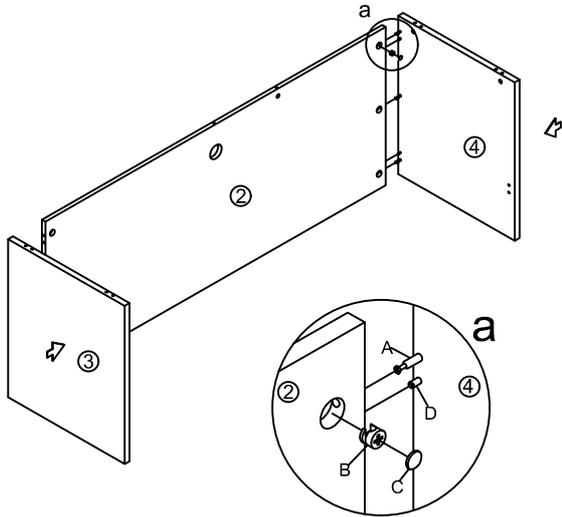

STEP3

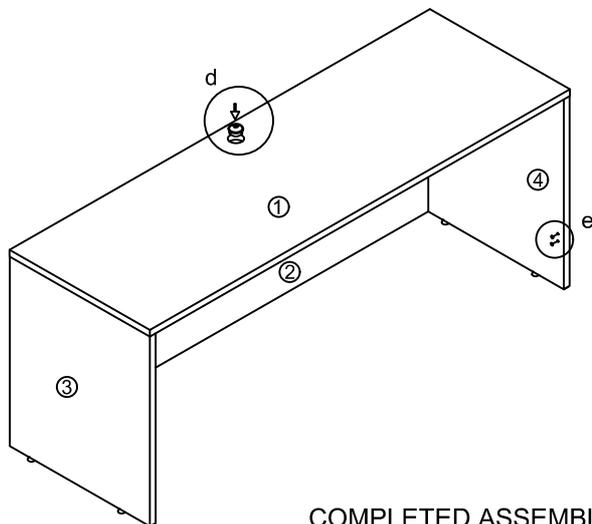

COMPLETED ASSEMBLY


IMPORTANT:

FUNCTION OF KLIX CAM



1/4 RIGHT
TURN FOR
LOCKING

MAKE SURE THE ARROW IS
POING UPWARDS BEFORE
INSERTING INTO THE PANELS
HOLE

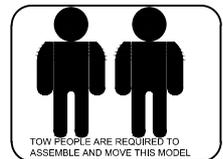

TWO PEOPLE ARE REQUIRED TO
ASSEMBLE AND MOVE THIS MODEL

IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children
- If the product is not working properly, is missing a part, is damaged, or if you have any questions, please call customer service hotline before returning.
- Customer Service Hotline: 1-800-593-1888 For further assembly instructions, please visit our website at www.bosschair.com