


Thank you for your purchase!

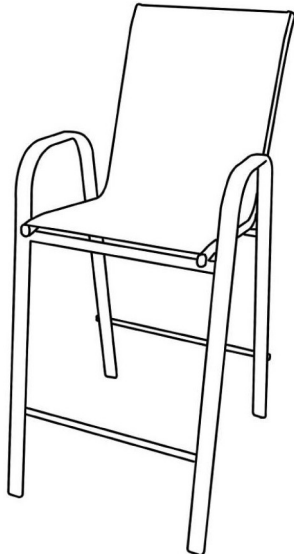

OUTDOOR BARSTOOL WITH FLEX COMFORT MATERIAL AND METAL FRAME - SET OF 2

ASSEMBLY INSTRUCTIONS

Before You Begin:

Please identify all component parts and hardware pieces required before you begin. Carefully remove all of the components from the packaging and set aside for assembly. Assemble on a soft surface to prevent scratching during assembly.

Caution:

Tighten all components securely before use. Failure to do so may result in personal injury.

DO NOT use any sharp objects to open plastic wrapped components as damage to product or components may result.

Warning:





CHOKING HAZARD - Small Parts. Adult Assembly Required.

DO NOT ALLOW CHILDREN TO CLIMB ON FURNITURE



Serious or fatal injuries can occur from furniture tipping over. You must install Tipping Restraint Hardware (where included) to help prevent the unit from tipping and causing accidental injury, instability, death or damage. The tipping restraint is intended only as a safety measure, it is not a substitute for proper adult supervision.

To help prevent furniture from tipping over it must be permanently attached to the wall. Anti-Tip Safety Wall Straps suitable for the unit weight and wall materials (if not included) should be purchased and installed.


PARTS

A	 <p>Rear Stabilizing Bar</p>	1PC	C	 <p>Allen Wrench</p>	1PC
B	 <p>Bolt</p>	2PCS	D	 <p>Cap</p>	2PCS

STEP 1

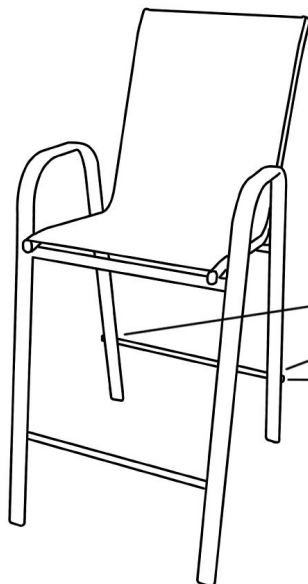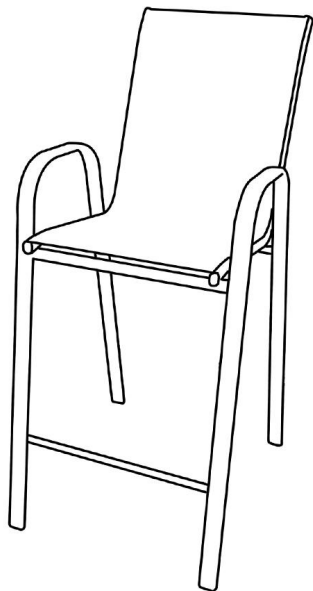

STEP 1: Attach Rear Stabilizing Bar (Part A) to Rear Legs using (2) Bolts (Part B). Tighten with Allen Wrench (Part C) and cover with Cap (Part D)

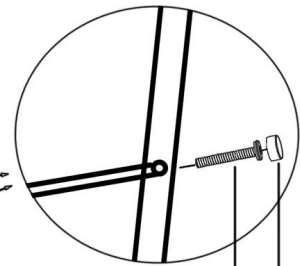

A


Rear Stabilizing Bar

BD

Bolt

Cap

STEP 2

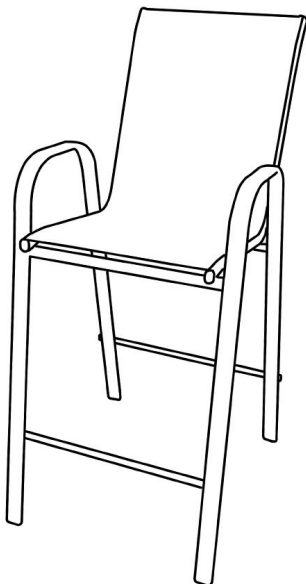

Thank you for your purchase!