Thank you for your purchase!

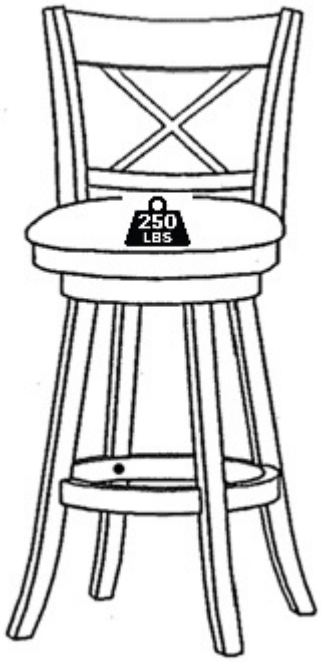

Commercial Grade Classic Crossback Swivel Bar Height Wooden Stool

ASSEMBLY INSTRUCTIONS

Before You Begin:
Please identify all component parts and hardware pieces required before you begin. Carefully remove all of the components from the packaging and set aside for assembly. Assemble on a soft surface to prevent scratching during assembly.

Caution:
Tighten all components securely before use. Failure to do so may result in personal injury.
DO NOT use any sharp objects to open plastic wrapped components as damage to product or components may result.

Warning:

CHOKING HAZARD - Small Parts. Adult Assembly Required.

DO NOT ALLOW CHILDREN TO CLIMB ON FURNITURE

Serious or fatal injuries can occur from furniture tipping over. You must install Tipping Restraint Hardware (where included) to help prevent the unit from tipping and causing accidental injury, instability, death or damage. The tipping restraint is intended only as a safety measure, it is not a substitute for proper adult supervision.

To help prevent furniture from tipping over it must be permanently attached to the wall. Anti-Tip Safety Wall Straps suitable for the unit weight and wall materials (if not included) should be purchased and installed.

ASSEMBLY INSTRUCTION

IMPORTANT NOTE:

- To prevent scratches, place all wooden parts on a clean, smooth surface such as carpet.
- Keep all hardware parts out of reach of children.
- Follow step by step assembly instructions.

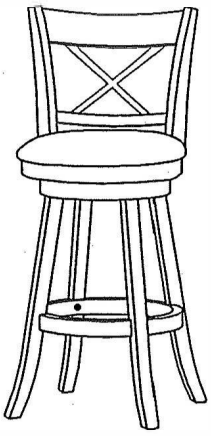

PARTS LIST

A 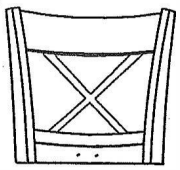 Backrest 1 PC	C Footrest 1 PC
B Chair Leg 4 PCS	D Apron with Swivel Plate 1 PC
	E Cushion seat 1 PC

HARDWARE LIST			
ITEM	DESCRIPTION		QTY
1	Hex Screw M6 x 25MM		4 PCS
2	Hex Screw M6 x 40MM		14 PCS
3	Hex Screw M6 x 90MM		4 PCS
4	Lock Washer M6 x 13MM		18 PCS
5	Flat Washer 6.5mm x 16.5mm		10 PCS
6	Flat Washer M6 x 13mm		12 PCS
7	Allen Wrench M4		1 PC

NOTE : Do not tighten all the screws until the stool is fully assembled.

STEP 1

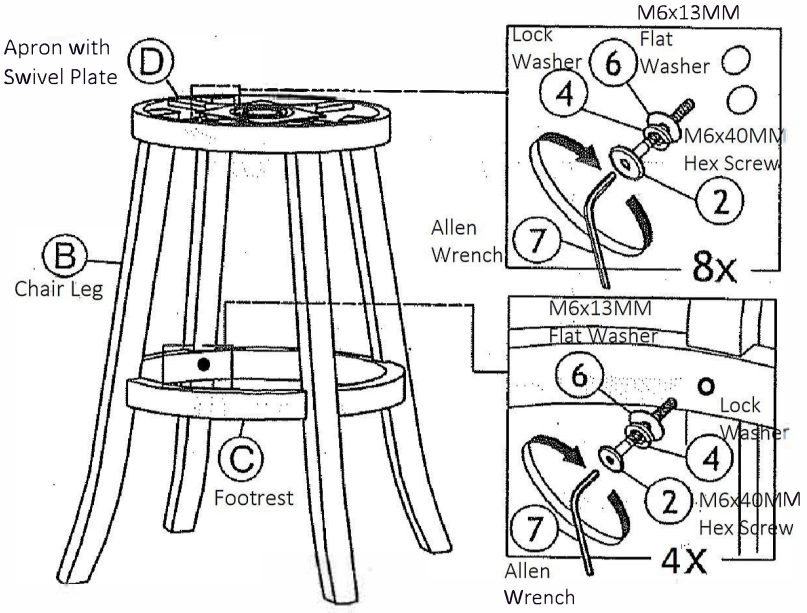

Attach the Chair Legs (Part B) to the Apron with Swivel Plate (Part D), then attach the Footrest (Part C) to inside of the Chair Legs (Part B) using (12) M6x40mm Hex Screws (Part 2), (12) Lock Washers (Part 4) and (12) M6x13mm Flat Washers (Part 6). Loosely tighten using Allen Wrench (Part 7).

ASSEMBLY INSTRUCTION

STEP 2

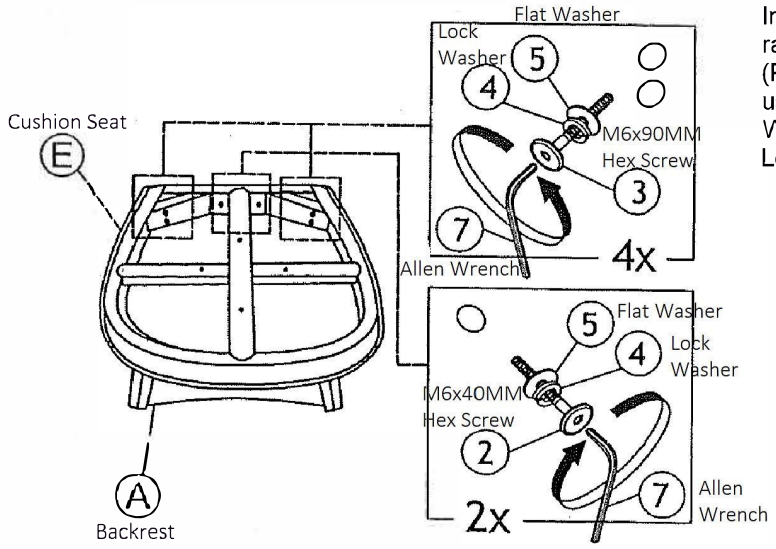

Invert Cushioned Seat (Part E) and place on a stable raised surface such as a table. Attach the Backrest (Part A) to the corners of the Cushioned Seat (Part E) using (4) M6x90MM Hex Screws (Part 3), (4) Lock Washers (Part 4), and (4) Flat Washers (Part 5). Loosely tighten using Allen Wrench (Part 7).

Finish attaching the Backrest (Part A) to the Cushioned Seat (Part E) using (2) M6x40MM Hex Screws (Part 2), (2) Lock Washers (Part 4) and (2) Flat Washers (Part 5). Loosely tighten using Allen Wrench (Part 7).

STEP 3

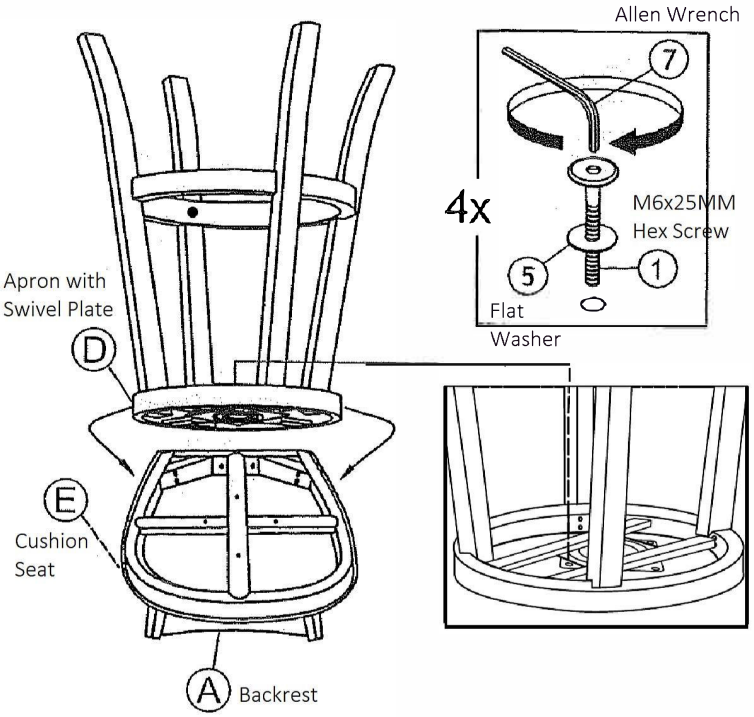

Keep the Backrest (Part A) and Cushioned Seat (Part E) inverted on a stable raised surface. Attach the Swivel Plate located on the Apron with Swivel Plate (Part D) to the Cushioned Seat (Part E) using (4) M6x25mm Hex Screws (Part 1) and (4) 6.5x16.5mm Flat Washers (Part 5). Securely tighten all screws using Allen Wrench (Part 7) then return chair to the upright position.

ENSURE THAT ALL SCREWS ARE FULLY TIGHTENED BEFORE USE.