


Thank you for your purchase!

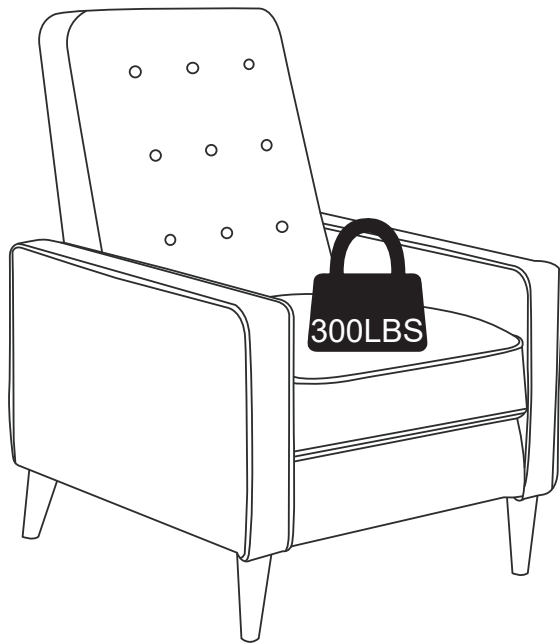

Mid-Century Modern Pushback Recliner

ASSEMBLY INSTRUCTIONS

Before You Begin:

Please identify all component parts and hardware pieces required before you begin. Carefully remove all of the components from the packaging and set aside for assembly. Assemble on a soft surface to prevent scratching during assembly.

Caution:

Tighten all components securely before use. Failure to do so may result in personal injury. DO NOT use any sharp objects to open plastic wrapped components as damage to product or components may result.

Warning:

CHOKING HAZARD - Small Parts. Adult Assembly Required.








DO NOT ALLOW CHILDREN TO CLIMB ON FURNITURE

Serious or fatal injuries can occur from furniture tipping over. You must install Tipping Restraint Hardware (where included) to help prevent the unit from tipping and causing accidental injury, instability, death or damage. The tipping restraint is intended only as a safety measure, it is not a substitute for proper adult supervision.


To help prevent furniture from tipping over it must be permanently attached to the wall. Anti-Tip Safety Wall Straps suitable for the unit weight and wall materials (if not included) should be purchased and installed.

.....

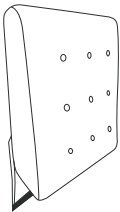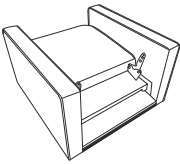
PARTS

(1)	(2)	(3)	(4)A	(4)B	(5)	(6)
						
BACK CUSHION X1PC	SEAT FRAME X1PC	PLASTIC WASHER X4PCS	REAR FOOT X2PCS	FRONT FOOT X2PCS	BOLT X2PCS	ALLEN WRENCH X1PC


STEP 1

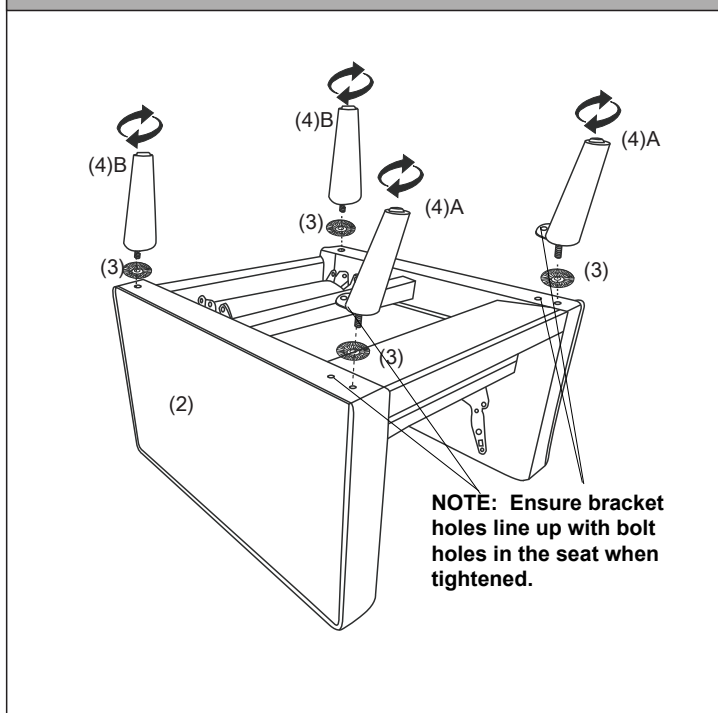

STEP 2

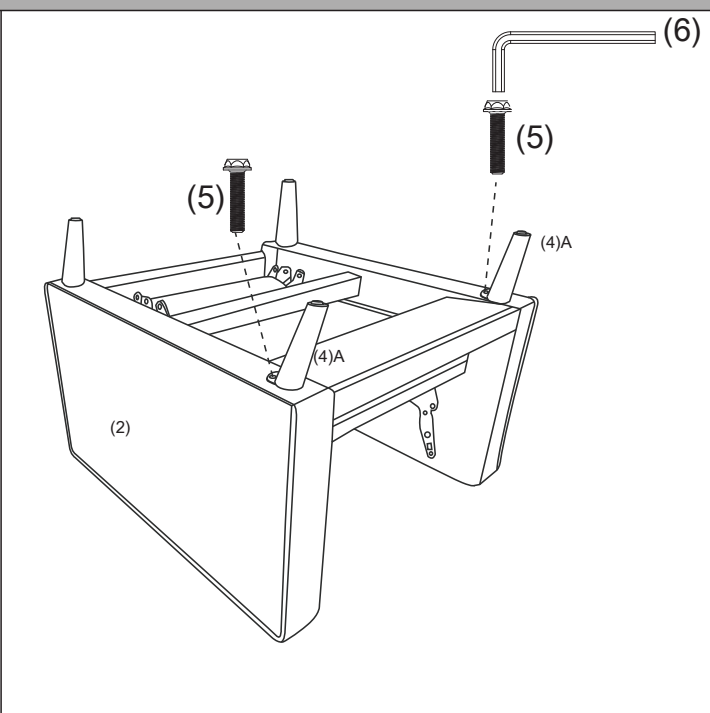

STEP 3

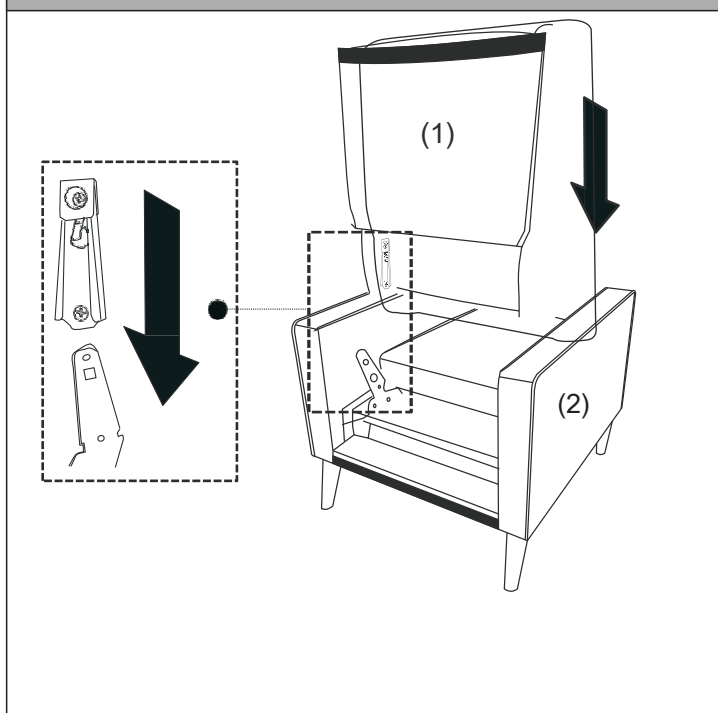

STEP 4

