

Figure 1

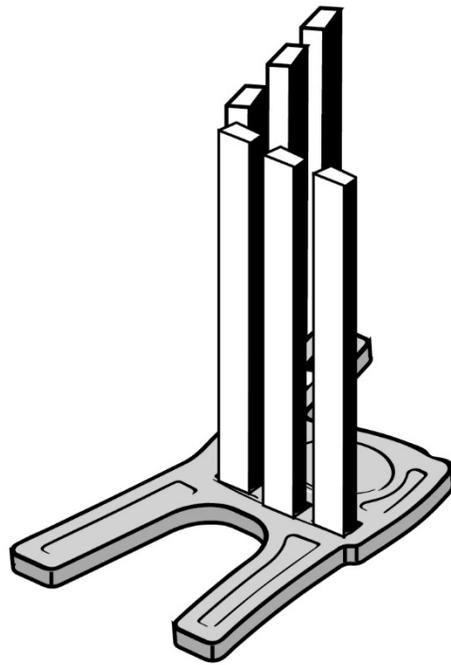


Figure 2

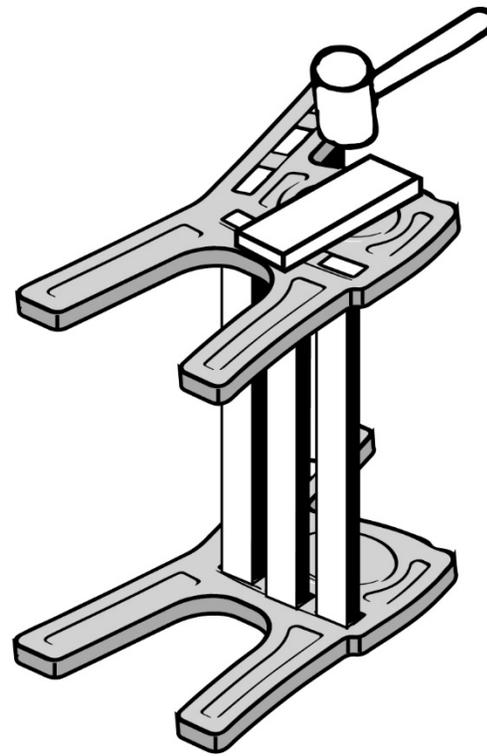


Figure 3

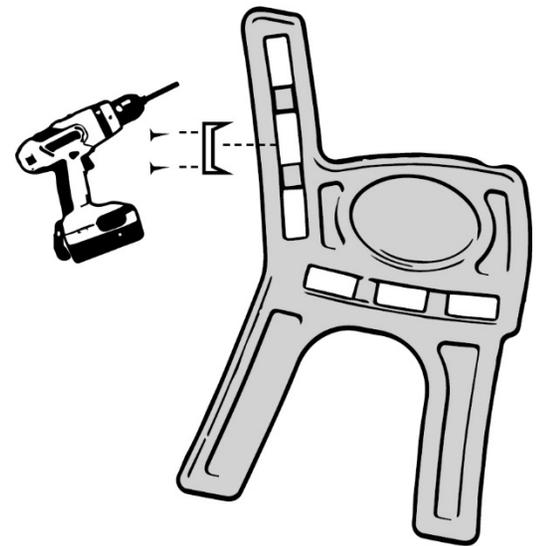


Figure 4

MATERIALS:

Six (6) 2"x 4" with plastic sleeves of equal length (included)

Twelve (12) End caps (included)

Twenty-Four (24) Stainless Steel screws (included)



To Assemble:

1. Drive 2"x 4" into one end, using rubber mallet (or scrap piece of wood and hammer.

Figure 1

2. Once all 2"x 4" are through one side, **Figure 2**, place the second bench end on the 2"x 4"s

3. Drive the 2"x 4" into the second bench using rubber mallet (or scrap piece of wood and hammer. **Figure 3**

4. Insert end cap over end of lumber, tap with rubber mallet, screw in 2 stainless steel screws(provided) **Figure 4**

**WARNING – For product safety, end caps must be installed per instructions.
Improper assembly could cause injury.**